

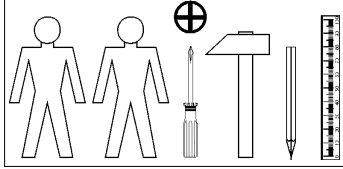
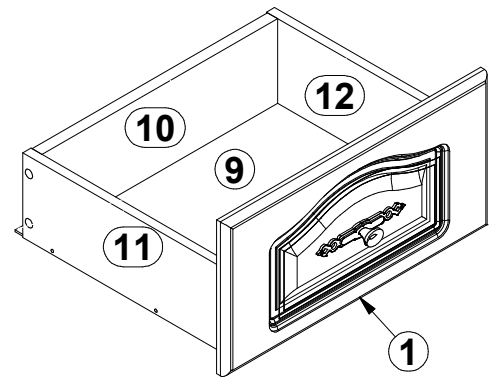
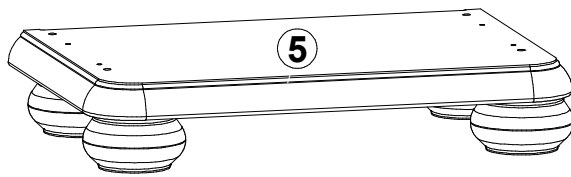


Do montázu potřebné sa:  
 Nezbytné během montáže:  
 You need for fitting-up:  
 Az Összeszereléshez szükséges:  
 Počas montáže potrebne:

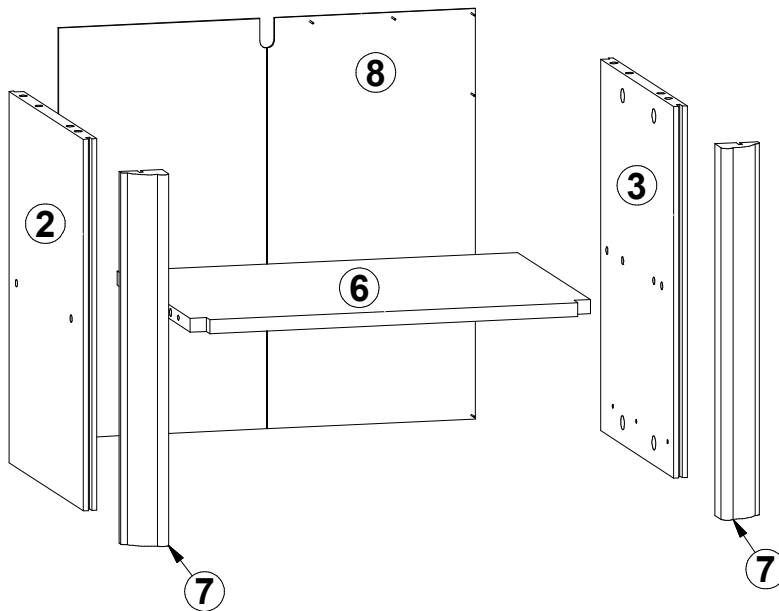

1	S41-0014	200	396	3/5
2	S41-1016	400	303	1/5
3	S41-1017	400	303	1/5
4	S41-2008	535	360	2/5
5	S41-2009	535	360	2/5
6	S41-3007	439,	312	1/5
7	S41-5004	400	47	4/5
8	S41-9305	442,	457,	1/5
9	WSP-9184	373	308	1/5
10	ZS7-5013	353	110	1/5
11	ZS7-523	300	110	1/5
12	ZS7-524	300	110	1/5

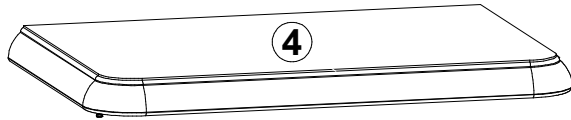

1x  c69	4x  φ7x50 mm e1	6x  φ6x30 mm e16	4x  φ5x9 mm e19	12x  φ8x30 mm f1	2x  φ6x30 mm f9	6x  46x18,4 mm f11	4x  φ6,5x40 mm f25	4x  φ10x40 mm f27
1x  M4x25 mm j8	4x  φ110x58/62 mm k47	25x  l1	8x  φ15x12mm #16 r1	4x  φ12x10,5mm #12 r15	12x  20/11 r42	4x  s1	4x  φ16 s2	6x  h=18 mm w36
1x  300 mm w37CL	1x  300 mm w37CR	1x  300 mm w37DL	1x  300 mm w37DR	1x  GLUE y1	1x  z1			
				1x  φ5x60 mm p17	1x  88x21x15/1,5 n14/2	1x  φ10x50 mm f35	2x  φ3,5x16 mm p38	

